

# DUTRO Daily Inspection

Detailed Information for No. ①~⑯ is stated at the back.  
Refer to the concerned No. of the items when you check.

## -PRECAUTION-

- 1) Check and repair any defective parts or malfunction found at the previous operation regardless of this inspection.
- 2) Let the engine idle until the coolant temperature gauge starts to move. When the engine is cold, do not race it nor maintain a high speed engine revolution.
- 3) After all inspection is completed, make sure that the load condition is proper.

**START**

**FINISH**

### 1 Front right side of vehicle...

- Check coolant level. ①
- Check brake fluid level through right side door window. ④
- Check front right tire & lug nuts condition. ⑨~⑫

### 2 Front of vehicle...

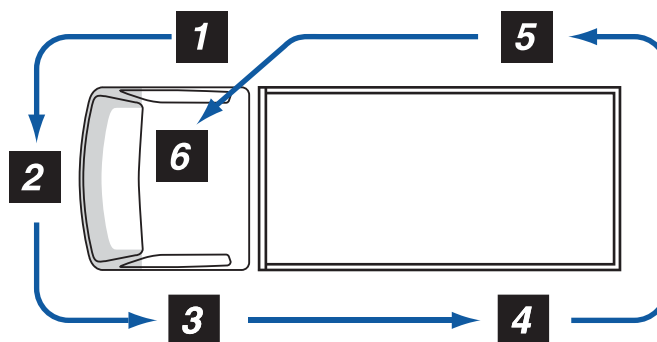
- Check lamp function.  
(stain, damage, lighting, blinking)

### 3 Front left side of vehicle...

- Check amount of window washer solution.  
(Open the left side door) ⑥
- Check front left tire & lug nuts condition. ⑨~⑫
- Check engine oil level. (Tilt up the cab) ②

### 6 Inside cab...

- Check engine start condition. ③
- Check warning indicators. ⑬
- Check function of parking brake. ⑤
- Check windshield damage and stain.
- Check the condition of window washer system and wiper condition. ⑦
- Check reflecting condition of rear-view mirrors. ⑧
- Check passing & high beam function. ⑭
- Check horn switch function. ⑮
- Check the fuel gauge. ⑯



### 5 Rear right wheel...

- Check rear right tire & lug nuts condition. ⑨~⑫

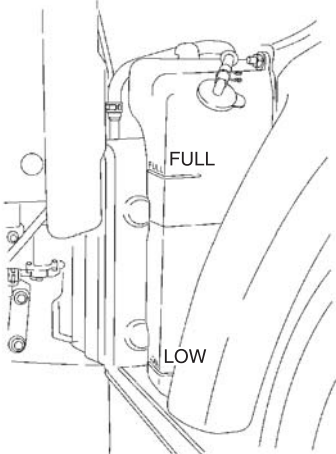
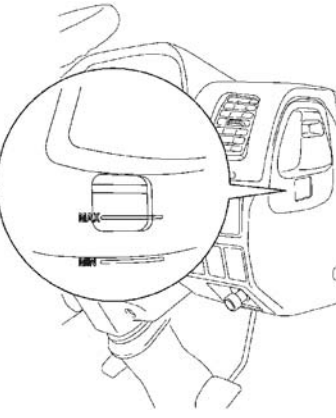
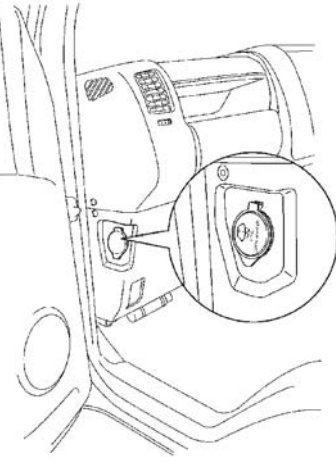


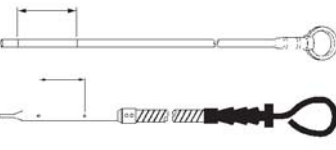
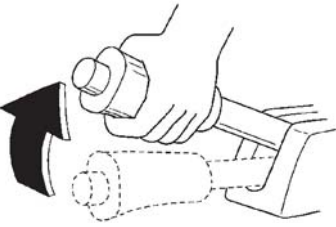

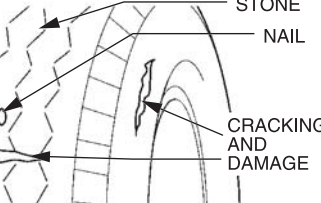
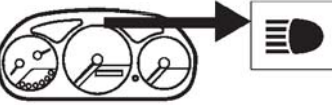


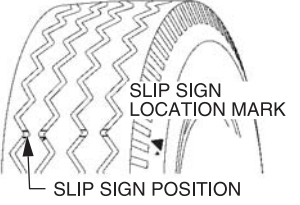
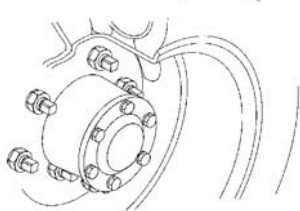
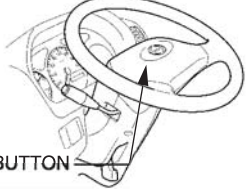
### 4 Rear left wheel...

- Check rear left tire & lug nuts condition. ⑨~⑫
- Check mounting condition of rear body.



HINO QUALITY SERVICE

# Process of daily inspection

Engine	Brake	Visibility	Tire	Electric equipment
<p>① <b>Engine coolant level</b> It is normal if the level is between "FULL" and "LOW" in a tank.</p> 	<p>④ <b>Brake oil level</b> It is normal if the level is between "MAX" and "MIN".</p> 	<p>⑥ <b>Amount of window washer solution</b></p> 	<p>⑨ <b>Air pressure</b> Check the tire inflation by visual check of the tire deflection at its contacting section with the ground.</p> 	<p>⑬ <b>Warning indicators</b> If malfunction indicator(s) is lighting up, check the corresponding system or ask to HINO dealer.</p>  <p>WARNING INDICATORS</p>
<p>② <b>Engine oil level</b> It is normal if the level is within the slotted zone of oil level gauge.</p> 	<p>⑤ <b>Lever stroke of center parking brake</b></p> 	<p>⑦ <b>Spraying condition of window washer solution and wiper blade condition</b></p> 	<p>⑩ <b>Clacks, damage and foreign material</b></p> 	<p>⑭ <b>Passing &amp; high beam function</b> Check high beam &amp; passing function when the beam control switch is operated.</p> 
<p>③ <b>Engine starting condition</b> Check the engine starts quickly.</p>  <p>ST</p>	<p>⑧ <b>Reflecting condition of rear-view mirrors</b> Check to see that each mirror is correctly adjusted for the driver to be able to see clearly the back and side.</p> 	<p>⑪ <b>Groove depth and abnormal wear</b></p> 	<p>⑰ <b>Wheel lug nuts tightness</b></p> 	<p>⑮ <b>Horn switch function</b> Push the horn button and check the function.</p>  <p>HORN BUTTON</p>
<p>⑬ <b>Fuel gauge</b> Check the fuel gauge. Replenish fuel if the needle approaches "E". (red zone)</p> 